


How to install the pre-filters for water ionizer



Use the hard pipe to connect the water outlet on the faucet valve adaptor and the water inlet on the pre-filters set.

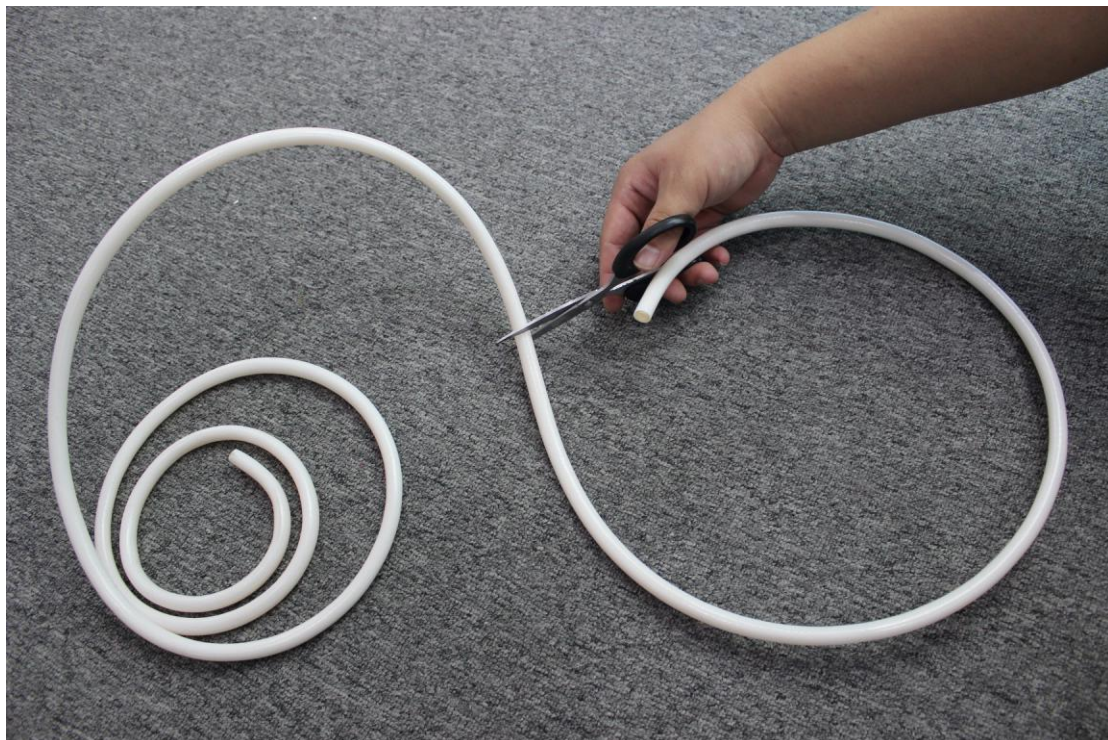


Cut the soft water pipe into suitable length according to your need. One is for connecting the water outlet of the pre-filters set and the water inlet under the water ionizer machine. Another is for connecting the water outlet under the water ionizer machine and the lower jack on the valve adaptor.



The pre-filters set water inlet is on the left side.



Take off the blue clip from the easy connector.

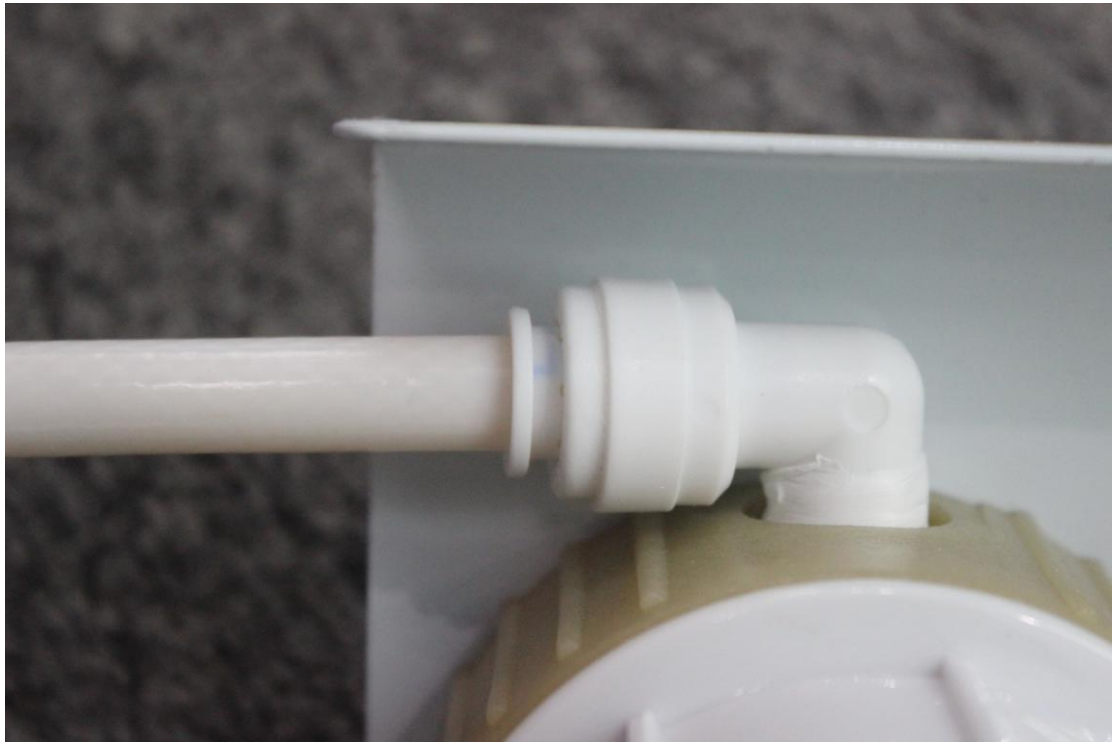

Plug the water pipe in the connector.



Put the clip back to fasten the pipe.



The water outlet is on the right.



Connect the easy connector. Use some water proof tape on the screw if necessary.



Plug the water pipe in the connector and fix it tight.



Connect the valve adaptor to your faucet.



The valve adaptor set is designed for fitting various different water faucets. The rubber ring is removable.



Take off the screw nut from the valve adaptor.




Put the end of water pipe(which is connecting to the water inlet on the pre-filters.) through the screw nut.



And connect it to the upper jack----it's the water outlet of the valve adaptor.



Fix the screw nut tightly.

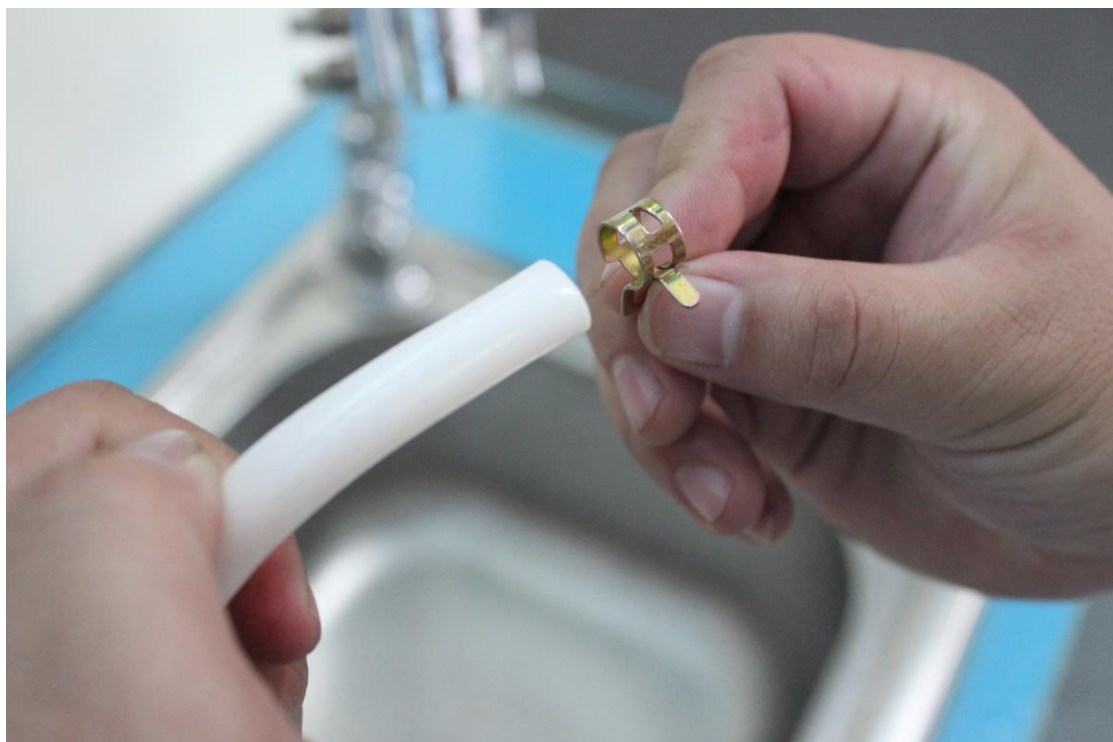

Fix the metal pipe clip to the other end of water pipe which is from the pre-filters outlet.



Connect it to the water inlet under the water ionizer machine.



Fix another metal clip to the other piece of soft pipe, and connect it to the water outlet.



Connect another end of the pipe to the lower jack of the valve adaptor.



Now all the pipes are connected.